

# Pipe Temperature Sensor

Temperature sensor for pipe mounting, Pt100 passive Sensor in hazardous locations zones 1, 2 and 22

Type TFR-AN-2G3D ATEX compliant

### **APPLICATION**

TFR-AN-2G3D temperature sensors for measuring surface temperatures. In combination with Exitransducer Type EXL-IMU-1 with intrinsic safe circuit the sensor may be used in hazardous areas 1, 2 and 22. The passive potential free resistor output of the sensor is changed into an active signal of 0(2)... 10 V- and/or 0(4)... 20 mA. Application is temperature measurement on pipes in non condensing, aggressive air.

### **TECHNICAL DATAS**

TFR-AN-2G3D Type Supply by Ex-i transducer Pt100 DIN Sensor Accuracy Class B Sensor current < 2 mA Ambient temperature -30...+60 °C -30...+110 °C Measure temperature Storage temperature -40...+70 °C

CE 94/9/EC (ATEX)

Includes in price 1 temperature sensor, Type TFR-AN-2G3D incl. stress rippon

Installation area Hazardous locations in zone 1, 2 and 22

# suitable for Zone 1, 2, 22 acc. to ATEX

### Ex-i CIRCUITS - TABLE 1

Operation values maximum at terminal Simple apparatus suitable for Zone 1, 2,22 Only for connecting to intrinsically safe circuits with max values

# MOUNTING AND INSTALLATION

Notes to mechanical installation. The installation must comply with relevant directives and standards Particularly with regard to:


- Comply with the EMC directive
- Avoid parallel wiring of power cable this cause measurement errors.
- Recommendation: Use shielded cable. Connect shield at PLC or control room area, sensor side is open.
- Measuring Range
- choose installation in such way that failtures caused by heat abstaction keep small and the maximum ambient temperature are not reached
- Avoid oscillations, vibrations, impacts

# The maximum values must not be exceeded!

Please check your external capacities and inductivities in acc. to the length of the cable and the methode of installation.

## RECOMMENDED TRANSDUCER

- · Transducer Mfr. Schischek Type EXL-IMU-1
- In combination with transducer EXL-IMU-1 is intrinsic safety proof for simple circuits given
- Manufacturer declaration zone 1, 2 and 22

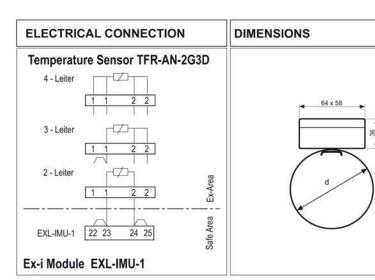

# ATTENTION!

- For installation, use and maintenance the official standards and rules must be applied
- The energy of intrinsically safe circuits are below the level to start an explosion in case of a spark
- Intrinsic safe circuits must be installed with light blue coloured and separate from non intrinsic safe circuits
- The sensor is passiv and potential free for use in hazardous
- locations in zone 1, 2 and 22

  Pay attention to the max values for wiring , listed in table 1.
- · Avoid electrostatic discharge
- · Only wet cleaning
- After mounting the protection class IP65 acc. to EN 60529 must be fulfilled

